

Lab 19.1.10

TASK: Configure domain account security

Complete the following work order to add a new Active Directory user:

User name	Dakota
Password	Pa55w0rd!
Workstation restriction	PC machine only
Logon hours restriction	Mon-Fri 8am-6pm
OU	Nonadmins
Security group	sec-glo-sales

Use the following accounts to access machines and services on the local network that might be relevant to resolving the issue.

Host	User	Password
ADMIN	Bobby	Pa55w0rd!

Choose guided step

HOLD Ctrl and use the mouse wheel outside the working window in the lab to adjust magnification.

Verify that you have completed the required tasks:

Use Active Directory Users and Computers to verify the account properties.

When you have checked your work, select the Evaluate button to assess and score the task:

Use Active Directory Users and Computers to verify the account properties.

1. Logged into Bobby on ADMIN to access If necessary, select ADMIN, and sign in as Bobby with Pa55w0rd!

From the Start menu, select Windows Administrative Tools, and then Active Directory Users and Computers.

Expand the domain, and then right-click Nonadmins, and select New, and then User. Complete the wizard by using the following properties:


Name: Dakota
Password: Pa55w0rd!
User must change password: Uncheck



Select Nonadmins. Right-click Dakota, and select Add to a group. Enter sec-glo-sales, and confirm the dialogs.

Right-click Dakota, and select Properties. Select the Account tab.


Click the Log On To button. Select The following computers, and add PC to the list. Select OK.

Click the Log Hours button. Select all the slots, and then select Logon Denied. Select the block of slots representing Mon-Fri 8am-6pm, and select Logon Permitted. Click OK.
Select OK.

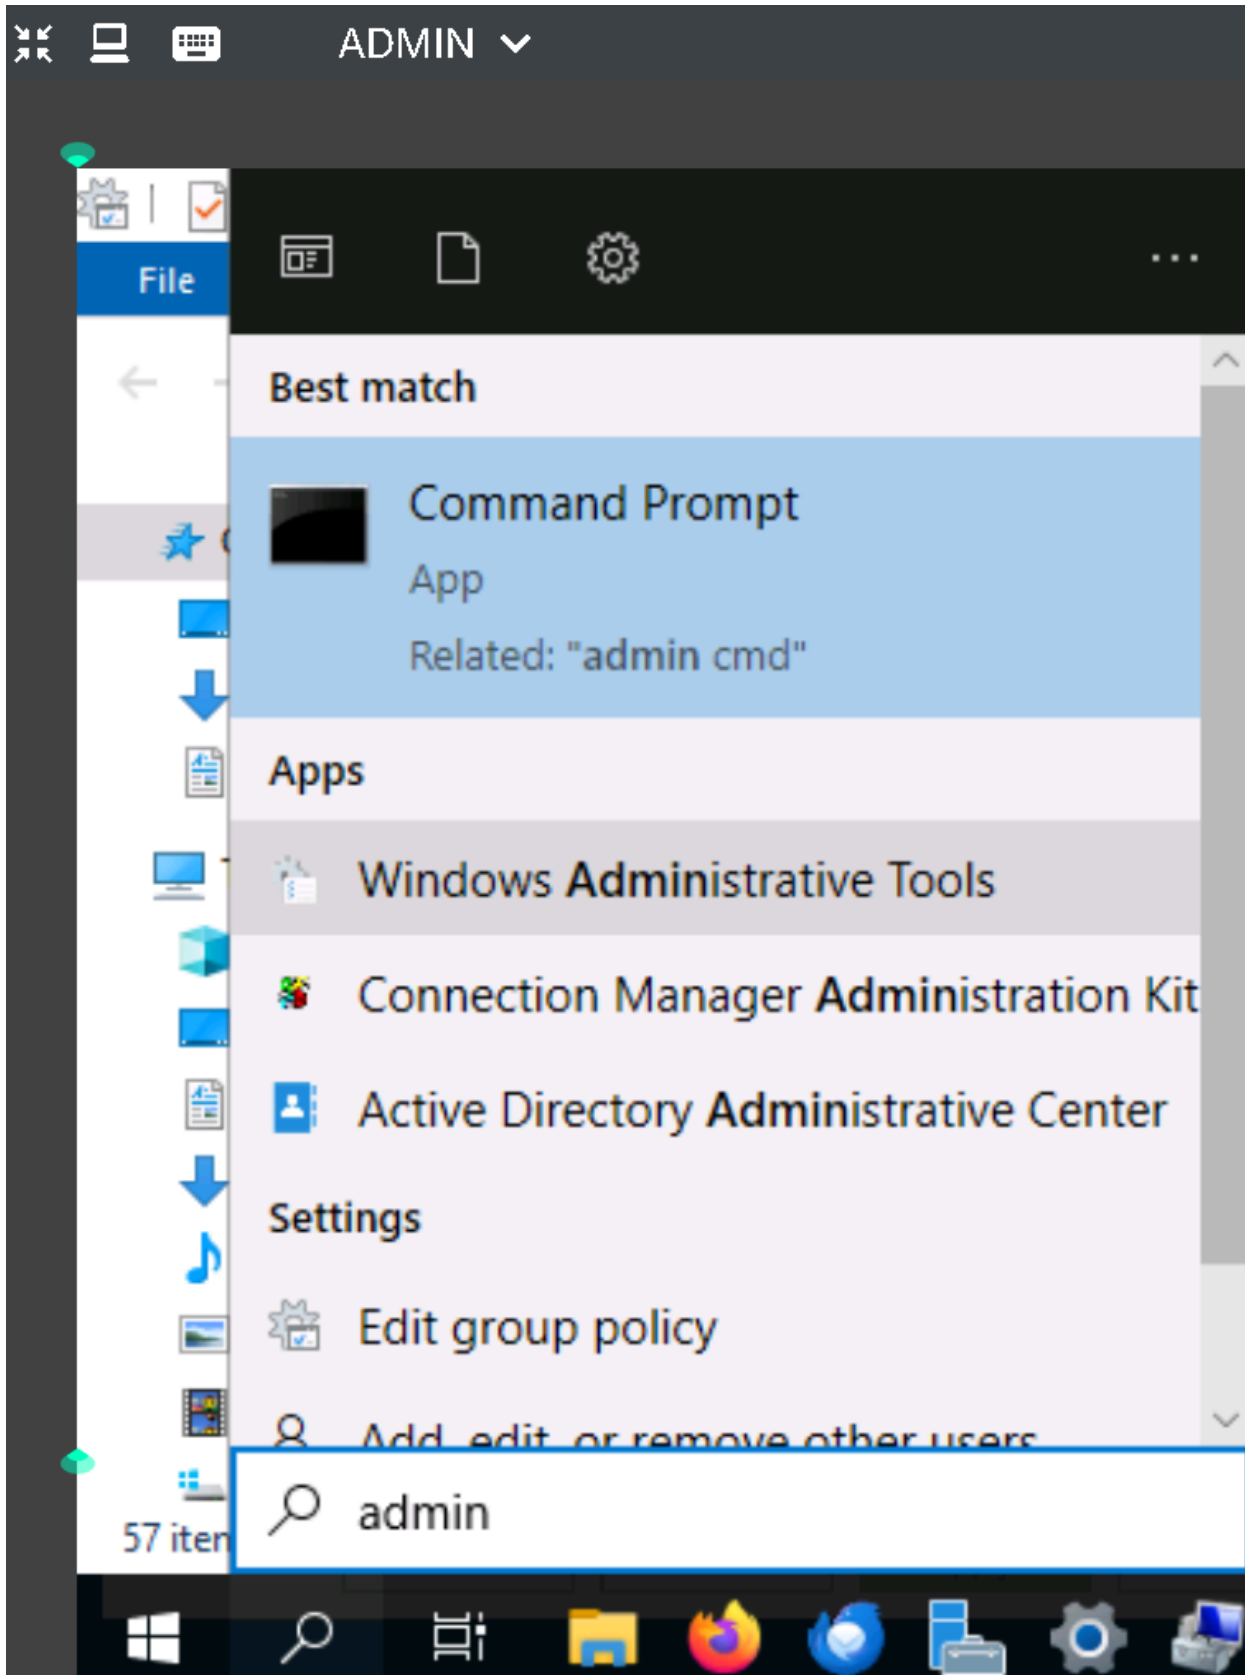

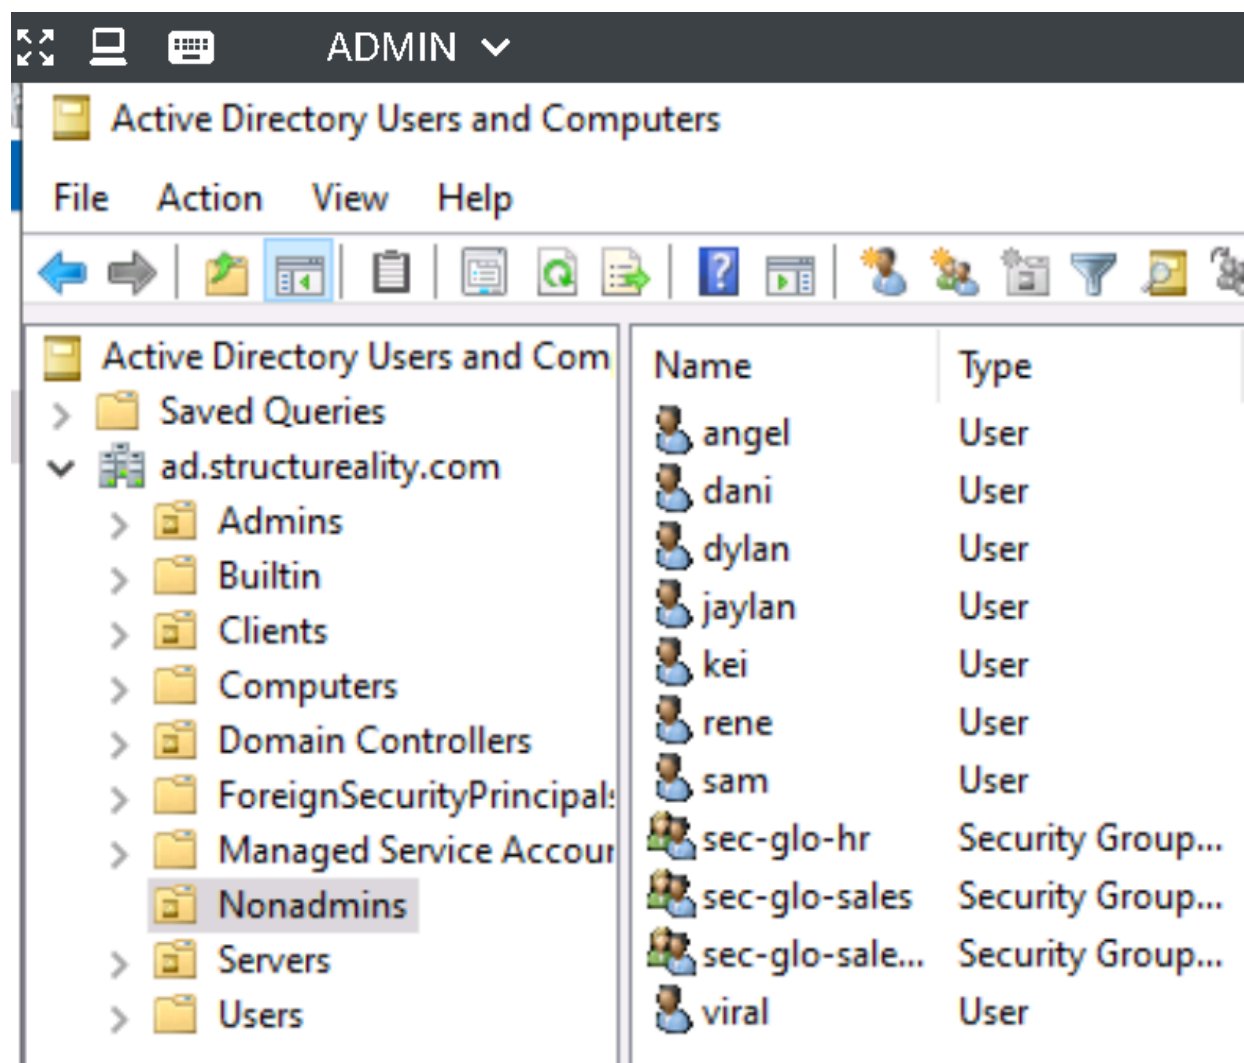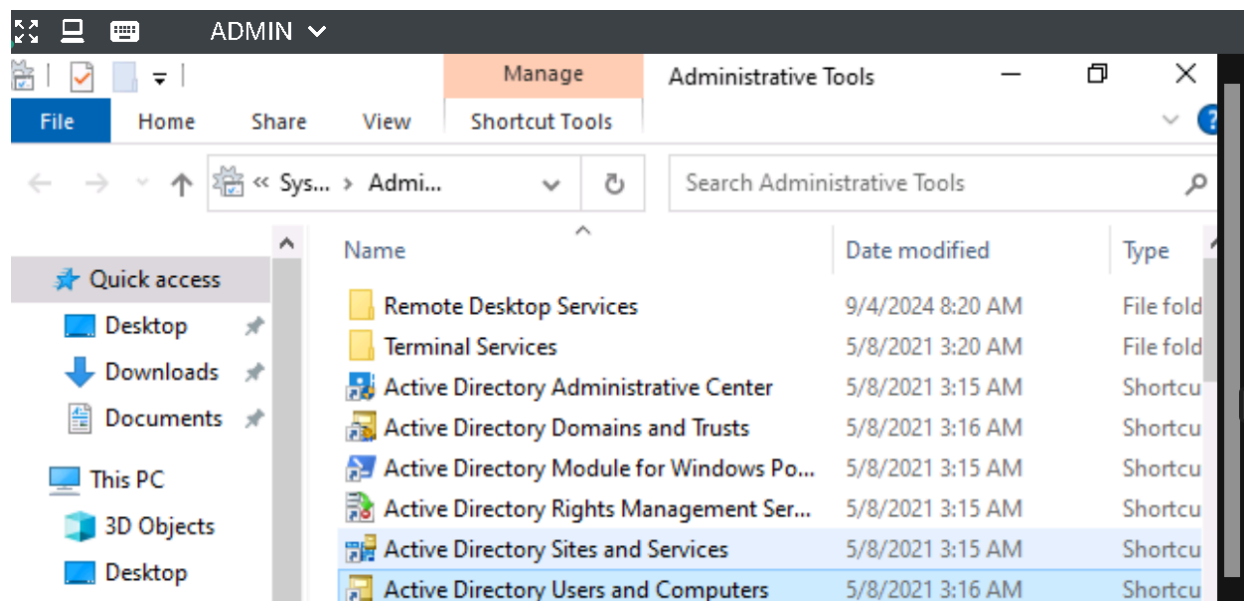

Right click in white space to create new user in NonAdmins

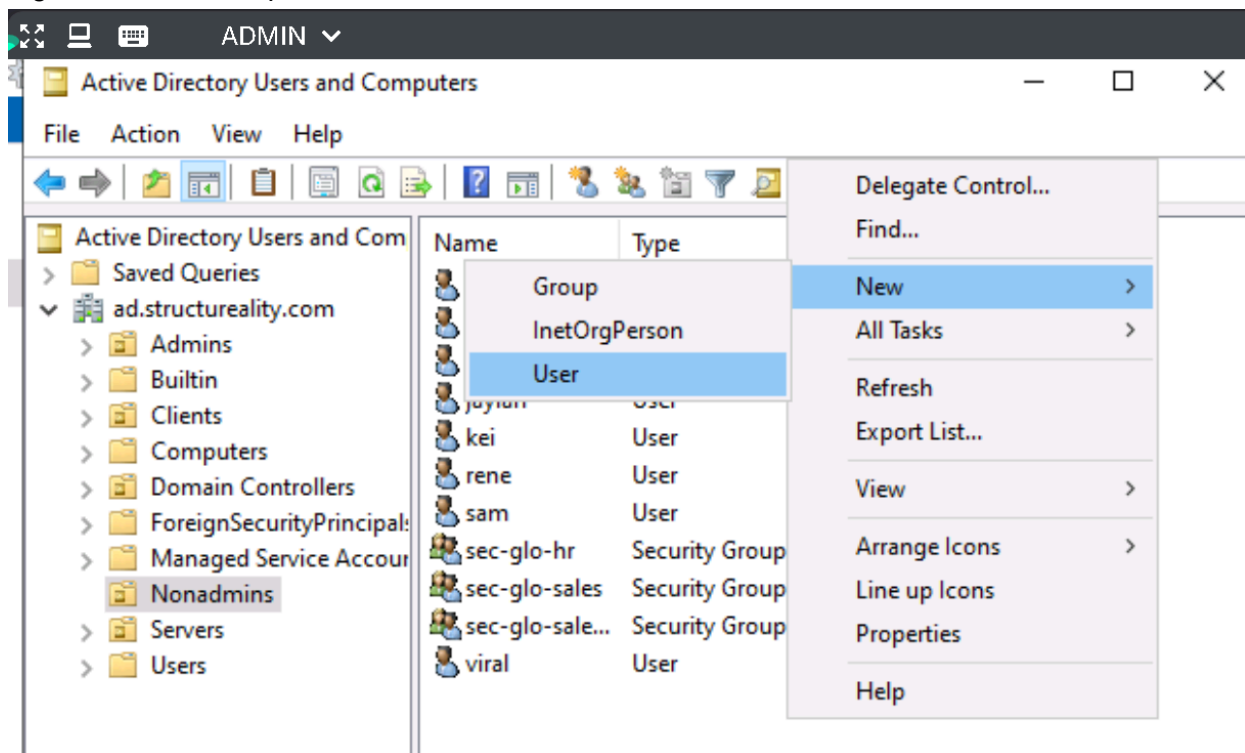

New Object - User



Create in: ad.structureality.com/Nonadmins

When you click Finish, the following object will be created:

Full name: Dakota



User logon name: Dakota@ad.structureality.com

The user must change the password at next logon.

< Back

Finish

Cancel

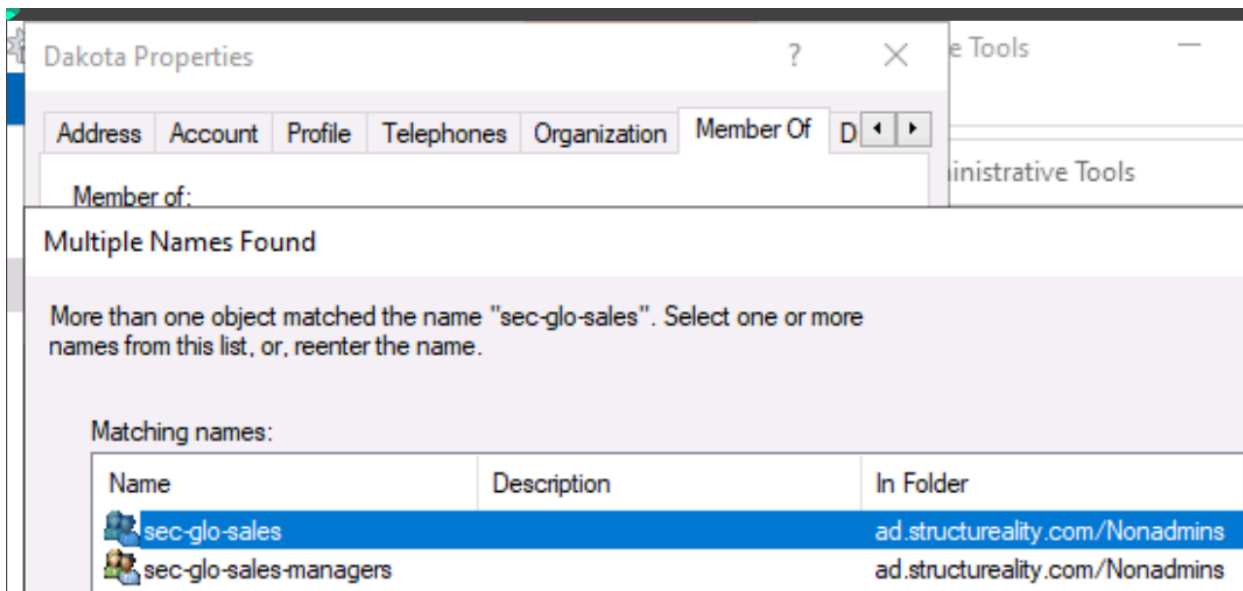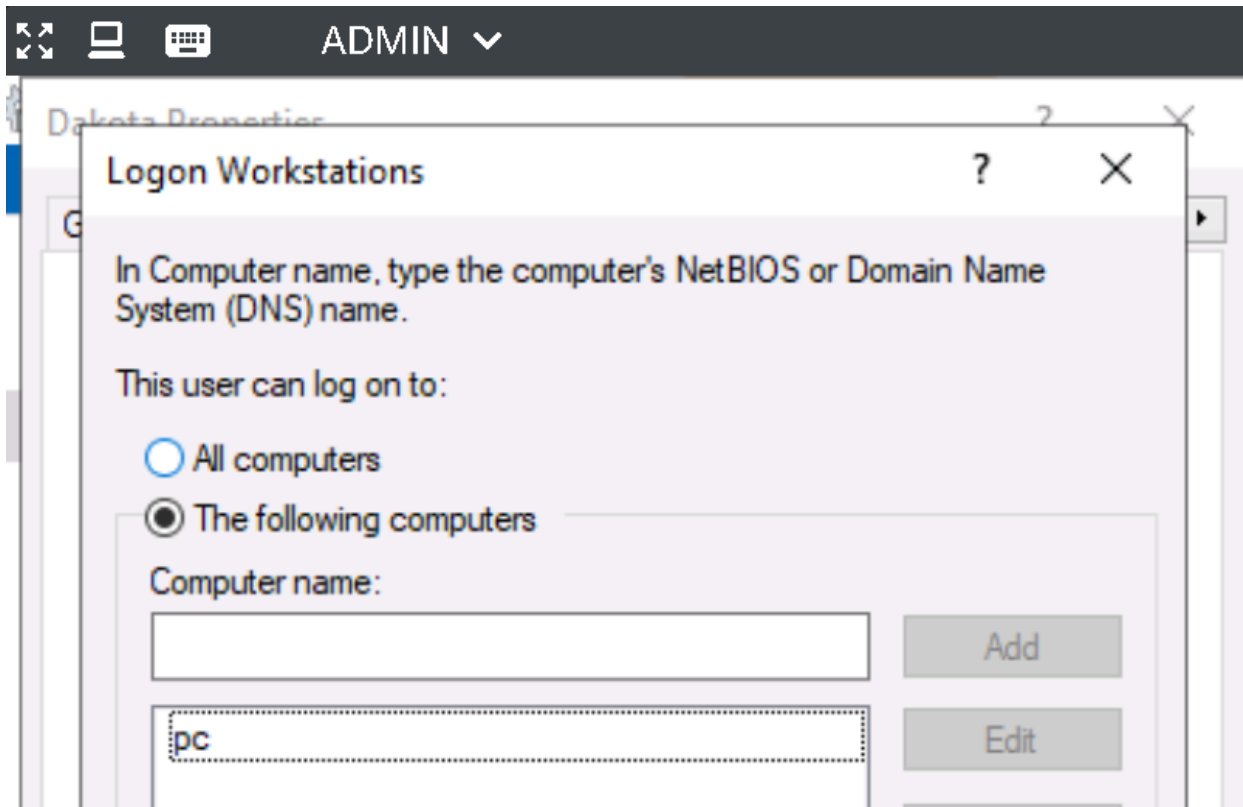

TASK: Report group policy

If necessary, select ADMIN, and sign in as Bobby with Pa55w0rd!

From the Start menu, select Windows Administrative Tools, and then Group Policy Management.

Expand the Domains folder, and then expand the domain (ad.structureality.com). Select Group Policy Objects.

This shows all the policies that have been created.

Expand Servers. Observe that a single policy is linked to this object. This means that the policy is applied to objects within the Servers Organizational Unit only.

Observe the link shortcuts attached directly to ad.structureality.com. Record these three policies as the ones that are applied at domain level.

Screenshot of group policy management showing policies linked at domain level as c c domain default default domain policy and u u domain default

Account policies can only be set once per domain, so you only need to examine the Default Domain Policy to report the remaining policy configurations.

In the navigation pane, select Default Domain Policy. In the main pane, select the Settings tab.

Expand Security Settings, then Account Policies/Password Policy. Record the password length and complexity policy configurations.

Expand Account Policies/Account Lockout Policy. Observe that the threshold is zero, so the policy is effectively disabled.

The screenshot displays the Windows Administrative Tools window with 'Group Policy Management' selected. The console shows the hierarchy: Forest: ad.structureality.com > Domains > ad.structureality.com > Group Policy Objects. The main pane shows a list of Group Policy Objects (GPOs) in the 'Contents' tab.

Name	GPO Status	WMI Filter	Modified	Owner
cc-clients-adminpolicy	Enabled	None	11/29/2024 4:4...	Domair
cc-dc-default	Enabled	None	1/29/2025 10:5...	Domair
cc-domain-default	Enabled	None	10/25/2024 10:...	Domair
cc-servers-adminpolicy	Enabled	None	11/29/2024 4:4...	Domair
Default Domain Controller...	Enabled	None	9/4/2024 7:45:3...	Domair
Default Domain Policy	Enabled	None	9/4/2024 7:48:4...	Domair
uu-domain-default	Enabled	None	9/4/2024 7:48:5...	Domair

Group Policy Management

- Forest: ad.structureality.co
 - Domains
 - ad.structureality.co
 - cc-domain-defa
 - Default Domain
 - uu-domain-def
 - Admins
 - Clients
 - Domain Contro
 - Nonadmins
 - Servers
 - cc-servers-a

Servers

Linked Group Policy Objects Group Policy Inheritance Delegation

Link Order	GPO	Enforced	Link Enabled	GPO Status
1	cc-servers-adminpoli...	Yes	Yes	Enabled

Group Policy Management

File Action View Window Help


Group Policy Management

- Forest: ad.structureality.co
 - Domains
 - ad.structureality.co
 - cc-domain-defa
 - Default Domain
 - uu-domain-def

ad.structureality.com

Status Linked Group Policy Objects Group Policy Inheritance Delegation

Link Order	GPO	Enforced	Link Enabled	GPO Status
1	Default Domain Policy	No	Yes	Enabled
2	cc-domain-default	Yes	Yes	Enabled
3	uu-domain-default	Yes	Yes	Enabled

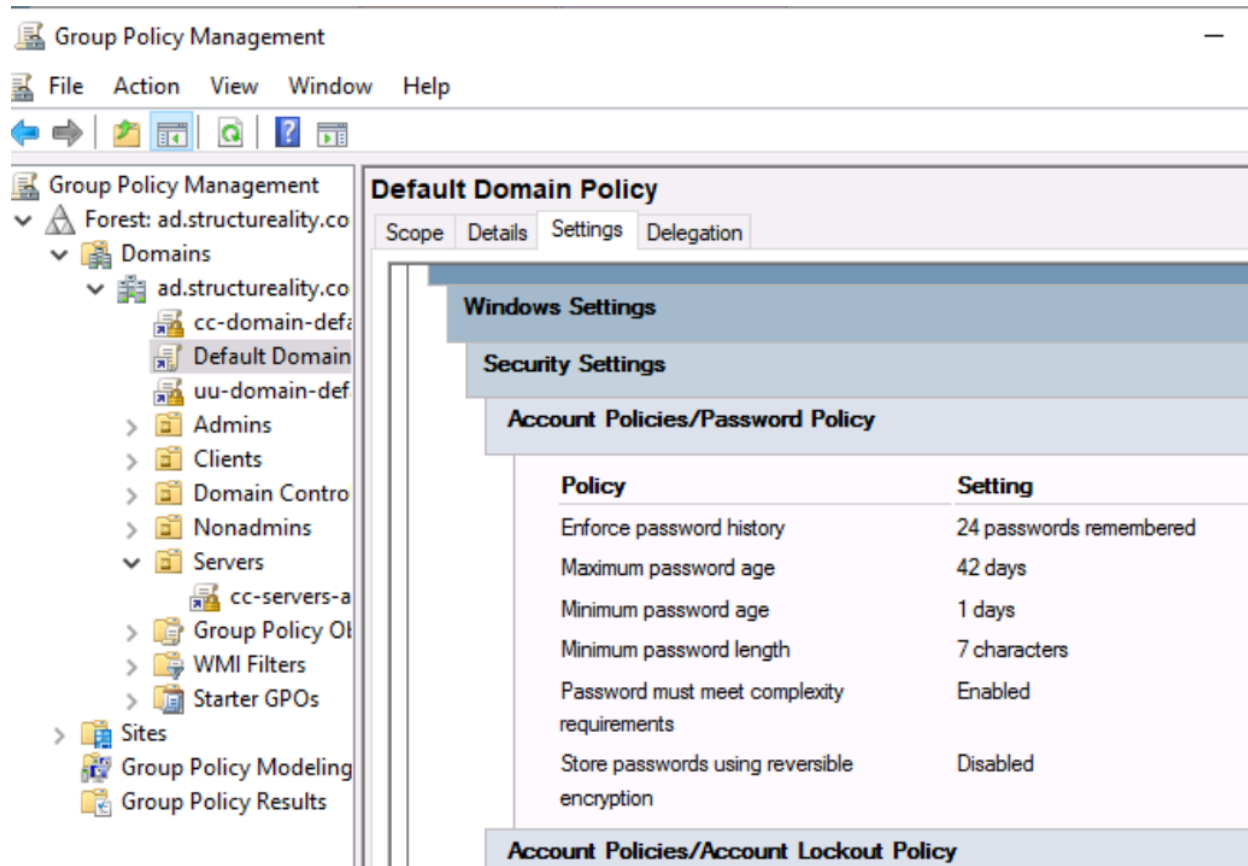

TASK: Configure group policy

If necessary, select [ADMIN](#), and sign in as Bobby with Pa55w0rd!

If necessary, from the **Start** menu, select **Windows Administrative Tools**, and then **Group Policy Management**.

Expand **Group Policy Objects**. Right-click **cc-servers-adminpolicy**, and select **Edit**.

Under Computer Configuration, expand **Policies**, then **Windows Settings**. Expand **Security Settings**, and then **Local Policies**. Select **User Rights Assignment**.

In the main pane, open **Allow log on locally**.

Check **Define these policy settings**. Select the **Add user or group** button.

In the dialog, type Administrators, and select **OK**. Select **OK**.

Select [MS](#), and sign in as Bobby with Pa55w0rd!

Right-click **Start**, and select **Run**. Type gpupdate, and press **ENTER**.

When the update is complete, right-click **Start**, and select **Shut down or sign out**, and then **Sign out**.

Group Policy Management

Forest: ad.structureality.com

- Domains
 - ad.structureality.com
 - cc-domain-default
 - Default Domain Policy
 - uu-domain-default
 - Admins
 - Clients
 - Domain Controllers
 - Nonadmins
 - Servers
 - Group Policy Objects
 - cc-clients-adminpolicy
 - cc-dc-default
 - cc-domain-default
 - cc-servers-adminpolicy
 - Default Domain Control
 - Default Domain Policy
 - uu-domain-default
 - WMI Filters
 - Starter GPOs

cc-servers-adminpolicy

Scope Details Settings Delegation Status

Links

Display links in this location: ad.structureality.com

The following sites, domains, and OUs are linked to this GPO:

Location	Enforced	Link Enabled	Path
Servers	Yes	Yes	ad.stru

Security Filtering

The settings in this GPO can only apply to the following groups, users, and computers:

Name
Authenticated Users

Add... Remove Properties

WMI Filtering

This GPO is linked to the following WMI filters:

Group Policy Management Editor

File Action View Help

cc-servers-adminpolicy [DC.AD.STRUCTUREALI

- Computer Configuration
 - Policies
 - Software Settings
 - Windows Settings
 - Name Resolution Policy
 - Scripts (Startup/Shutdown)
 - Deployed Printers
 - Security Settings
 - Account Policies
 - Local Policies
 - Audit Policy
 - User Rights Assignment
 - Security Options

Policy

Policy	Policy Setting
Access Credential Manager as a trusted caller	Not Defined
Access this computer from the network	Not Defined
Act as part of the operating system	Not Defined
Add workstations to domain	Not Defined
Adjust memory quotas for a process	Not Defined
Allow log on locally	Not Defined
Allow log on through Remote Desktop Services	Not Defined
Back up files and directories	Not Defined
Bypass traverse checking	Not Defined
Change the system time	Not Defined
Change the time zone	Not Defined
Create a pagefile	Not Defined

Group Policy Management Editor

File Action View Help



- cc-servers-adminpolicy [DC.A
- Computer Configuration
 - Policies
 - Software Settings
 - Windows Settings
 - Name Resolutio
 - Scripts (Startup
 - Deployed Printe
 - Security Setting
 - Account Pol
 - Local Policie
 - Audit Po
 - User Righ
 - Security
 - Event Log
 - Restricted G

Allow log on locally Properties

? X

Security Policy Setting Explain



Allow log on locally

☒ Define these policy settings:

Administrators

Add User or Group...

Remove